


Brick Veneer Rainscreen Retrofit

After Gutting a Flooded Home

Sure Cavity™ (SC 5016) or **Gravity Cavity™** (GC 1816)

Retrofit Brick Tie™ (RBT 7381)

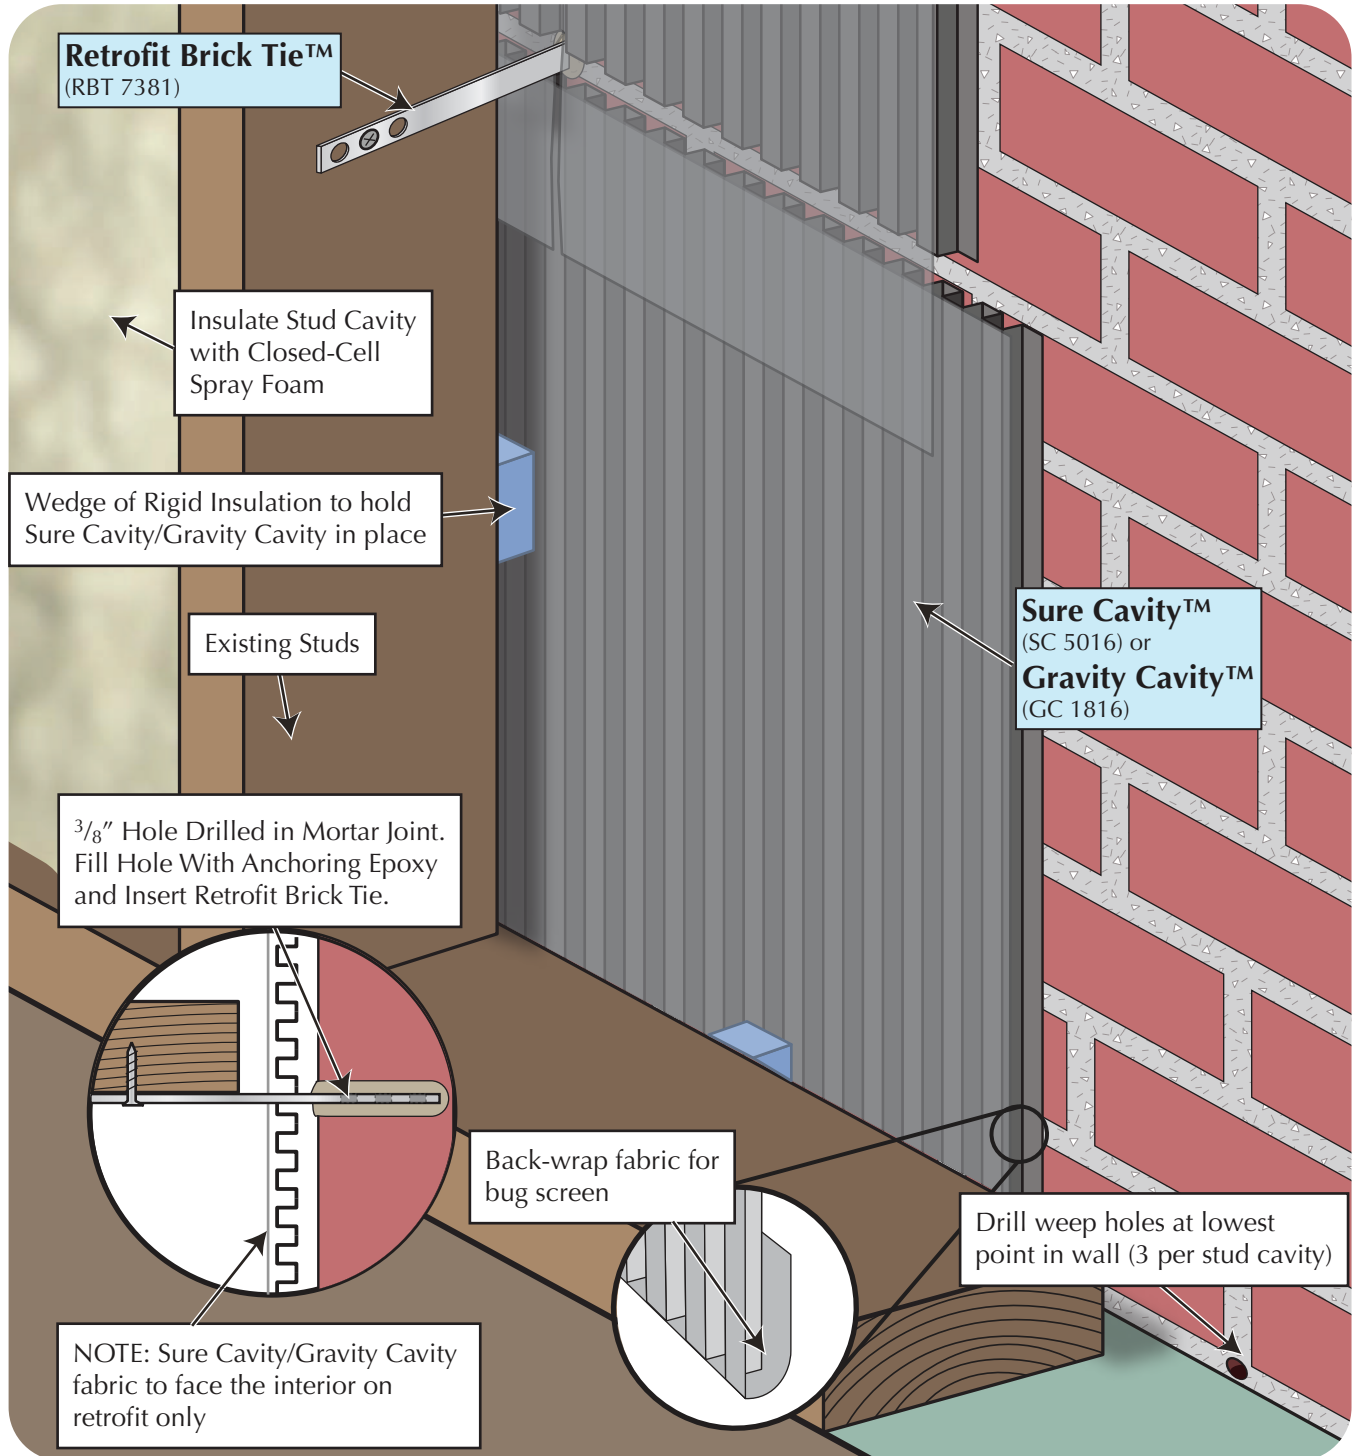

Note: The retrofit approach described in this detail is not standard building practice. Consult your licensed contractor, building official and insurance inspector for acceptability of any repair method considered.

Consider using in conjunction with a "wet floodproofing" approach to finishing the interior walls.

More at MTIdry.com/rebuild

Rev 11/7/17