


Brick Veneer Rainscreen Retrofit

After Gutting a Flooded Home

Sure Cavity™ (SC 5016 or SC 5032) or **Gravity Cavity™** (GC 1816 or GC 1832)

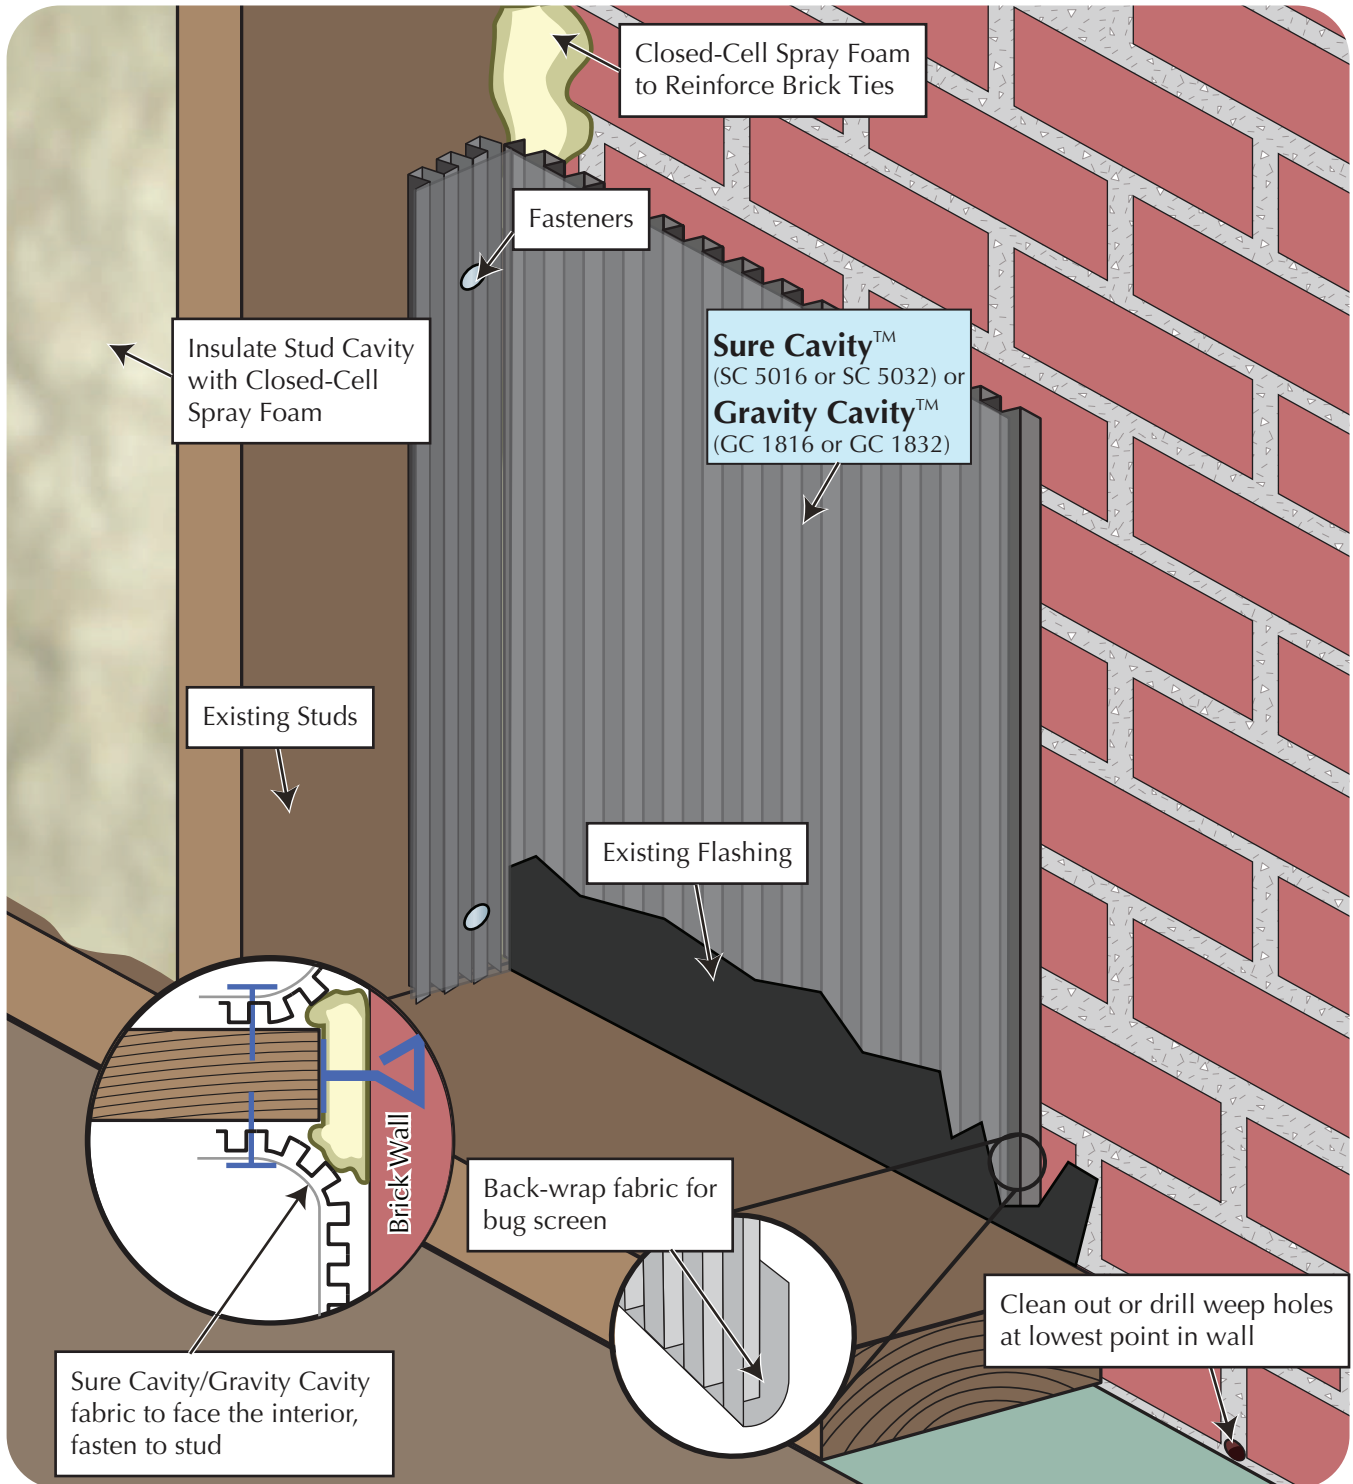

Note: The retrofit approach described in this detail is not standard building practice. Consult your licensed contractor, building official and insurance inspector for acceptability of any repair method considered.

Consider using in conjunction with a "wet floodproofing" approach to finishing the interior walls.

More at bit.ly/wet-floodproofing