


Full Stone At Bottom of Wall with Wood Backup Wall Drainage and Weep Detail

10MM Sure Cavity™ (SCMM 2516 or SCMM 2532) and Stone Cavity Weep™ (SCV 5012)

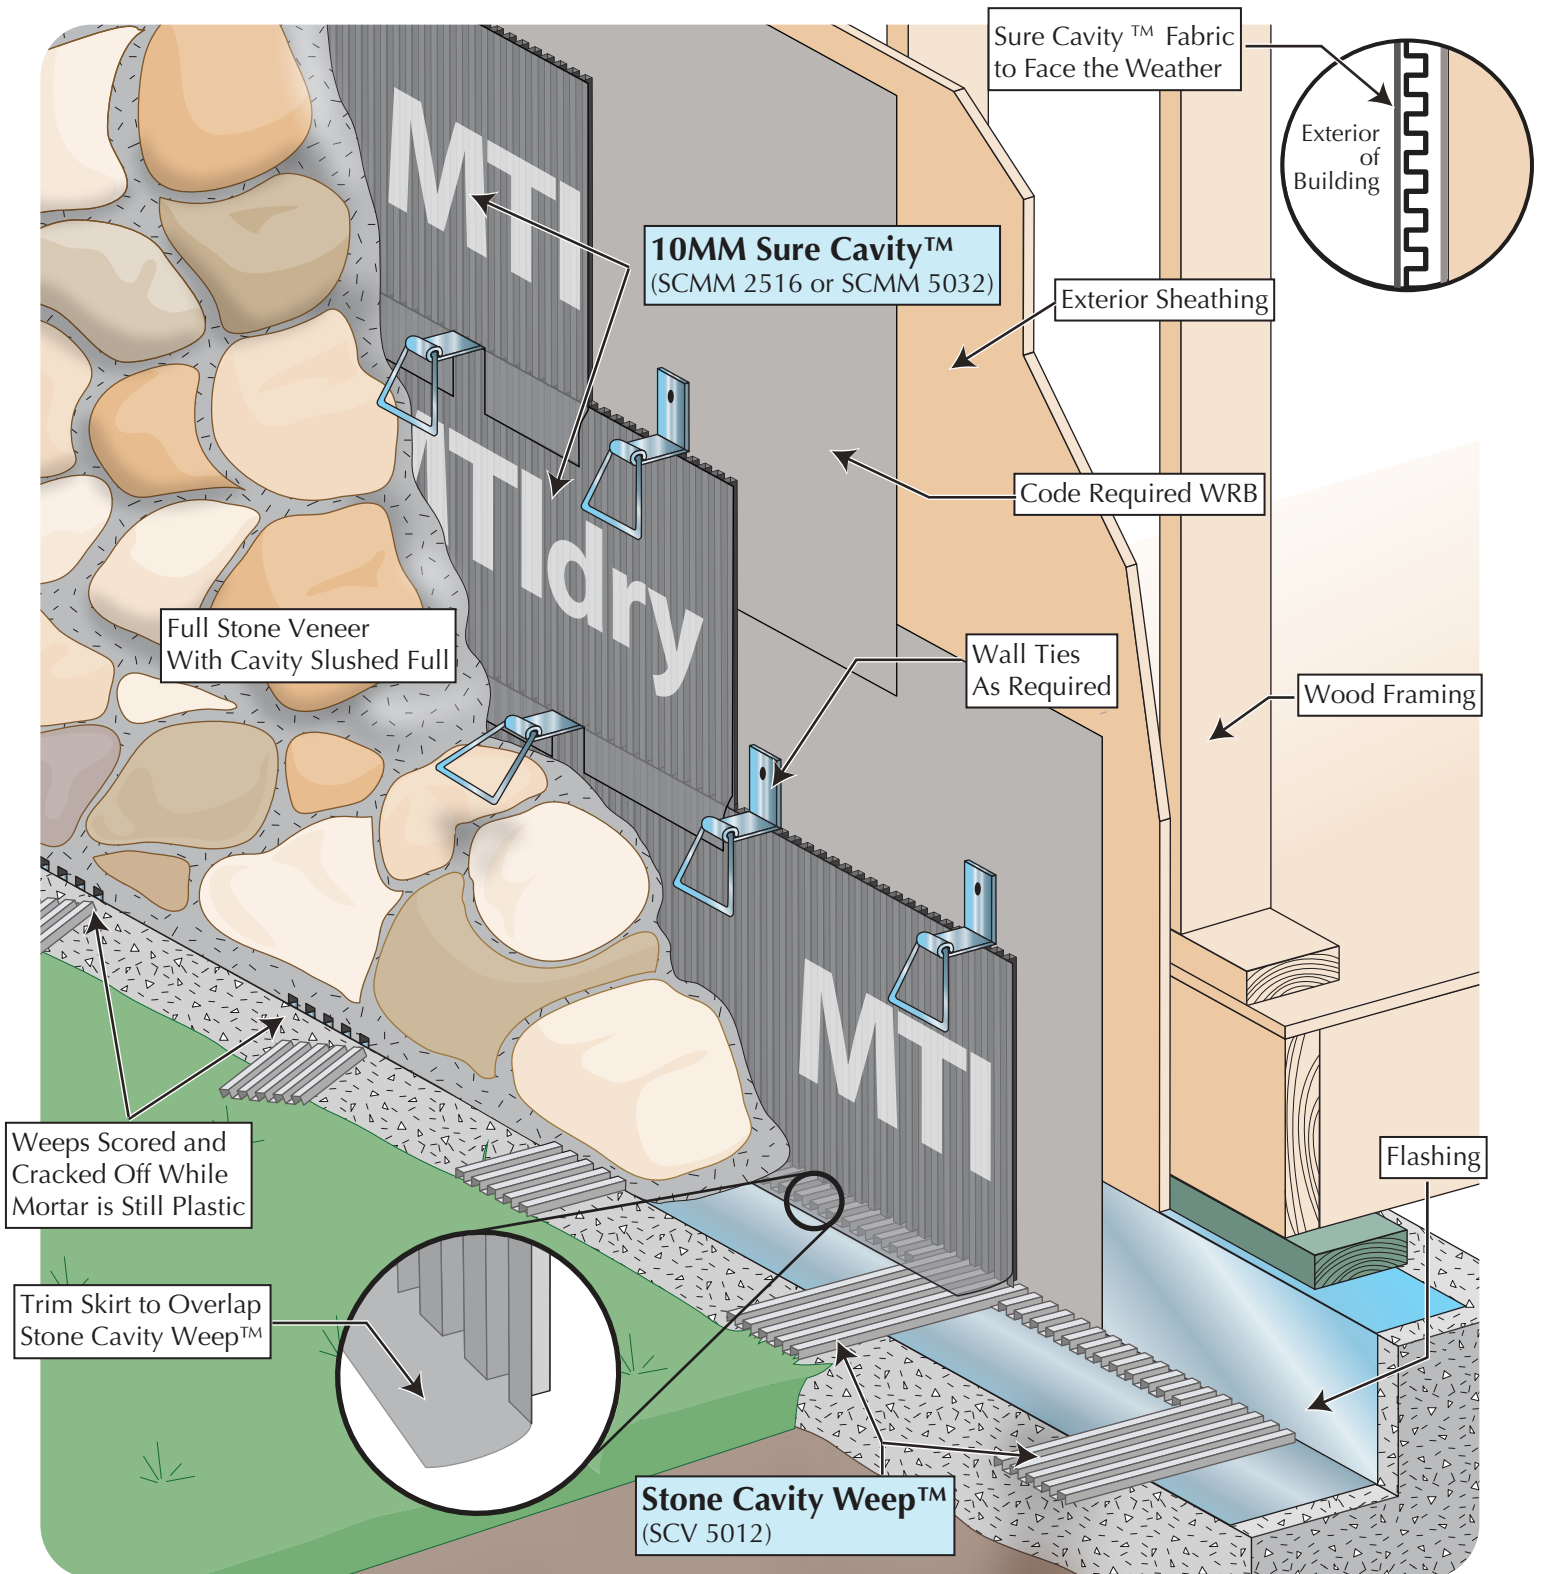

Weeps Scored and Cracked Off While Mortar is Still Plastic

Trim Skirt to Overlap Stone Cavity Weep™

Stone Cavity Weep™ (SCV 5012)

06FR02WD001

Copyright © Masonry Technology Incorporated, 2018 All Rights Reserved.


MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.

1-800-879-3348 | MTIdry.com

MTI MASONRY TECHNOLOGY INCORPORATED

Full Stone Veneer Run-to-Grade

Sure Cavity™ (SC 5016 or SC 5032) or 10mm Sure Cavity™ (SCMM 2516 or SCMM 2532) or Gravity Cavity™ (GC 1816 or GC 1832) and Wall Opening Weeps™ (WOW 9095)

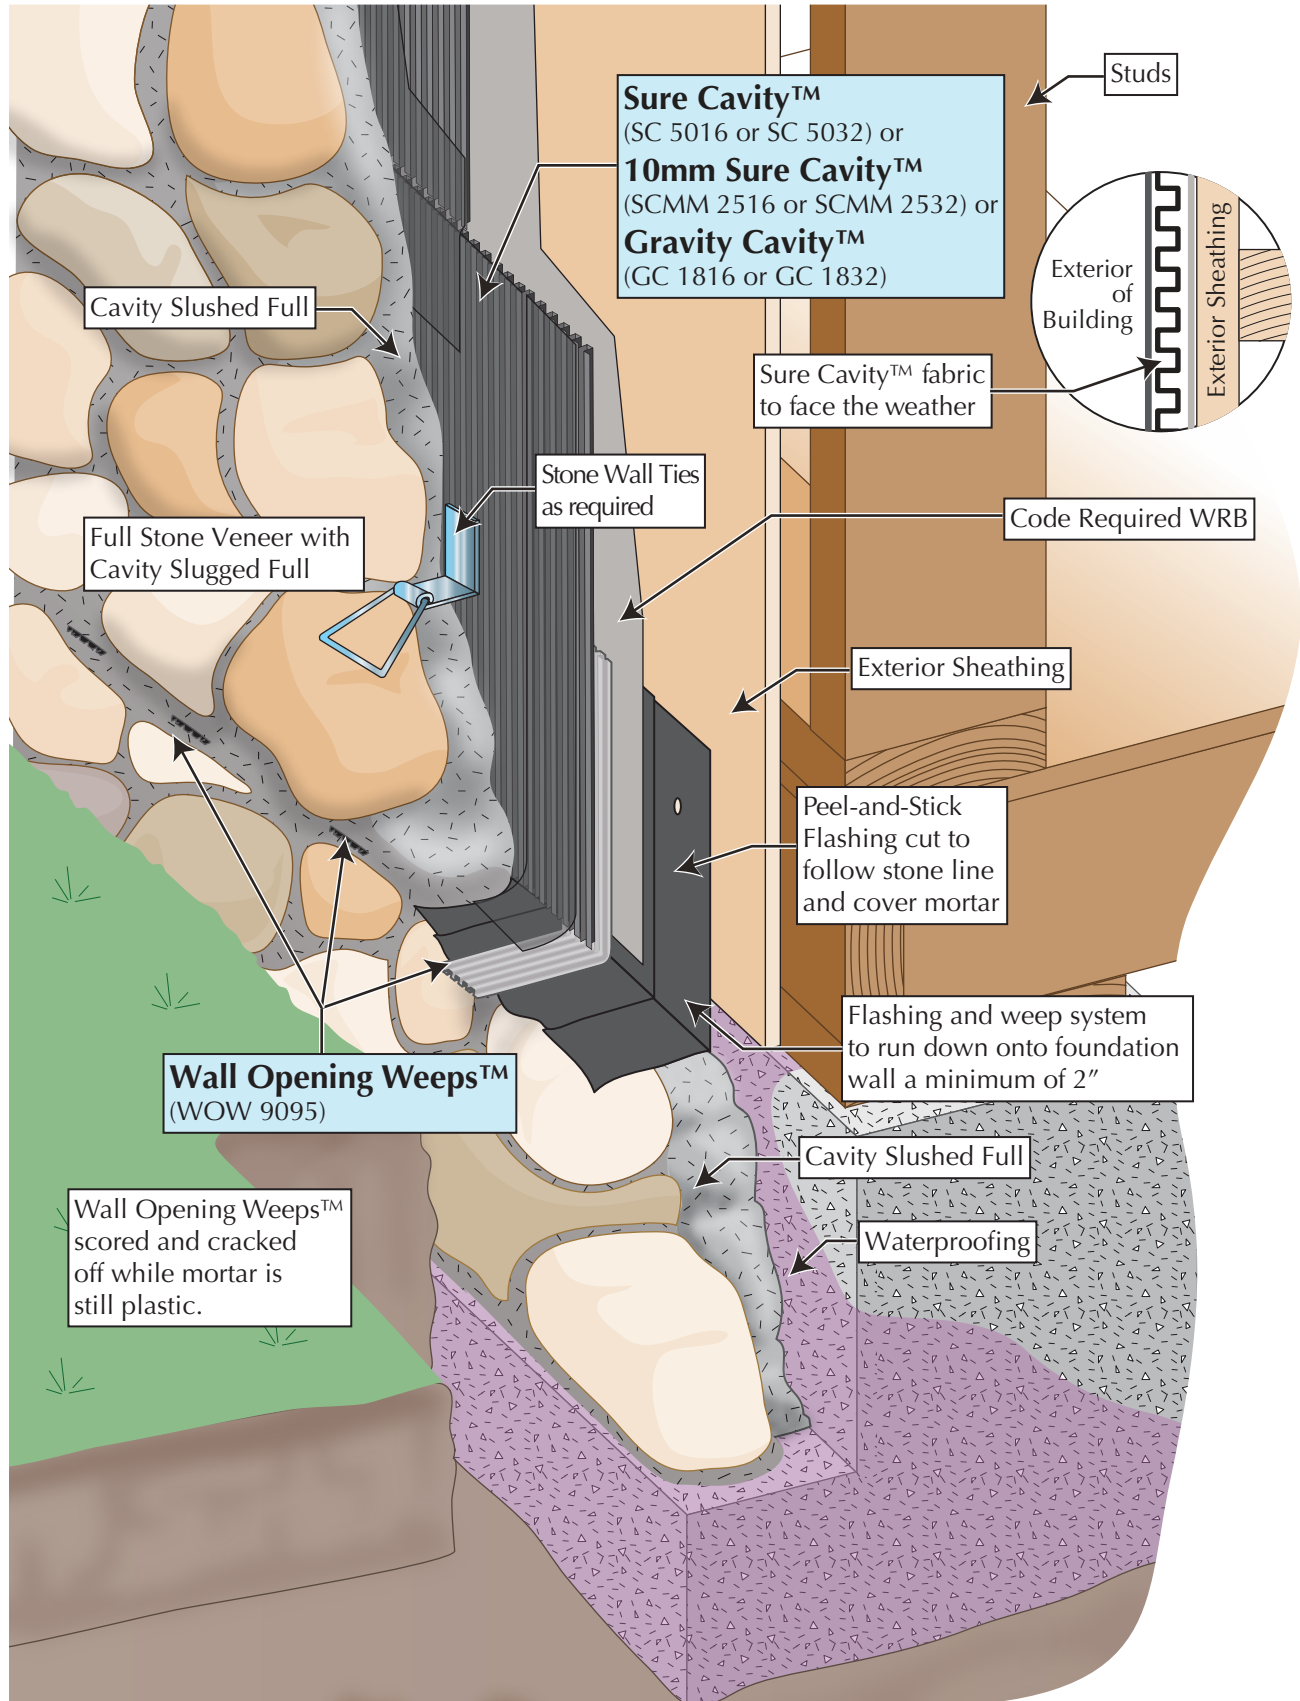

Copyright © Masonry Technology Incorporated, 2018 All Rights Reserved.

06FR10WD001


MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.

1-800-879-3348 | MTIdry.com



Full Stone Veneer at Bottom and Side of Window

Sure Cavity™ (SC 5016 or SC 5032) or **10mm Sure Cavity™** (SCMM 2516 or SCMM 2532) or **Gravity Cavity™** (GC 1816 or GC 1832) and **Wall Opening Weeps™** (WOW 9095)

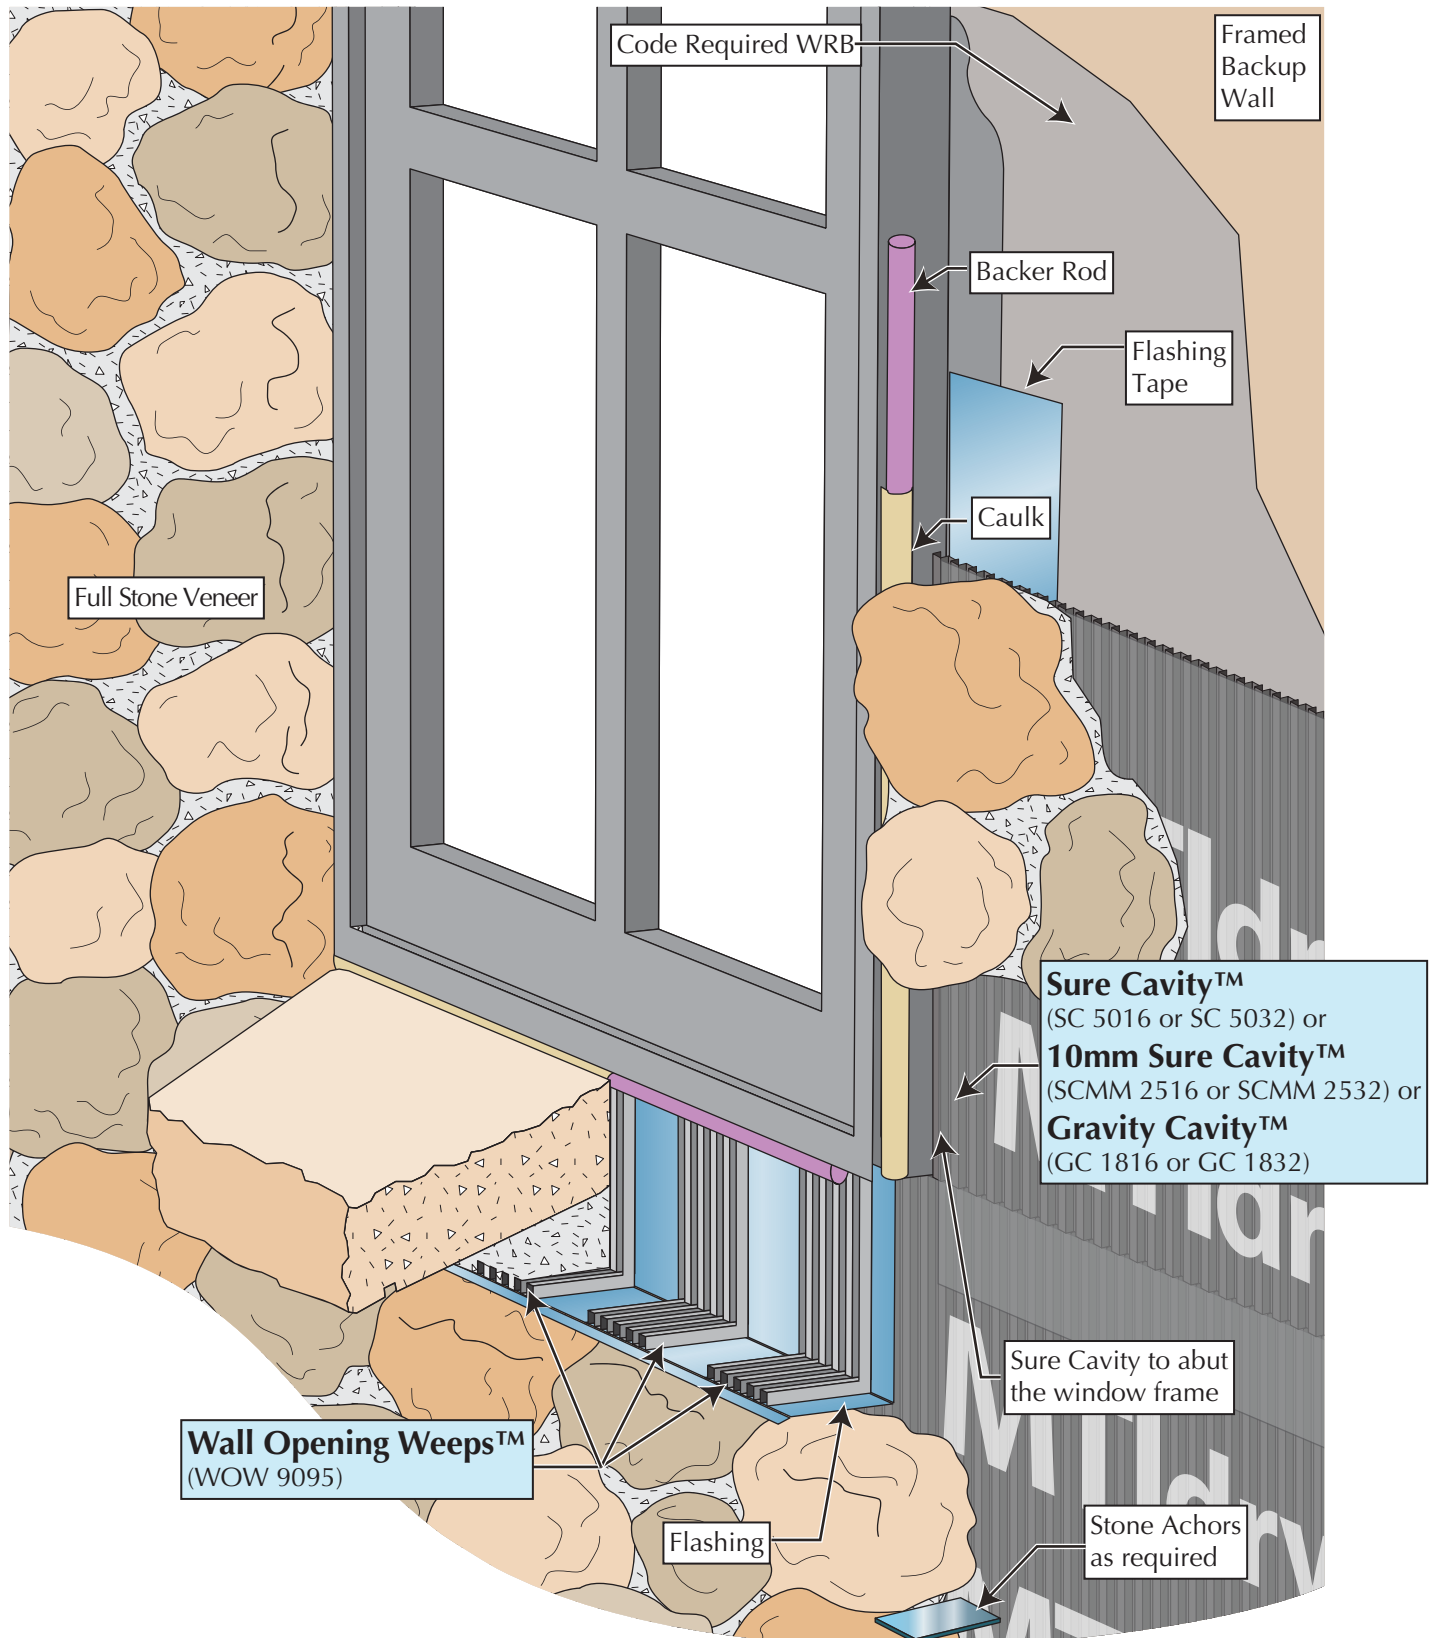

Copyright © Masonry Technology Incorporated, 2018 All Rights Reserved.

MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.


05FR03WD001

1-800-879-3348 | MTIdry.com

MTI MASONRY
TECHNOLOGY
INCORPORATED

Full Stone Veneer at Top of Window Steel Lintel Installation on Wood Framed Wall

Sure Cavity™ (SC 5016 or SC 5032) or 10mm Sure Cavity™ (SCMM 2516 or SCMM 2532) or Gravity Cavity™ (GC 1816 or GC 1832) and Wall Opening Weeps™ (WOW 9095) and Moisture Diverter™ (DS 2858)

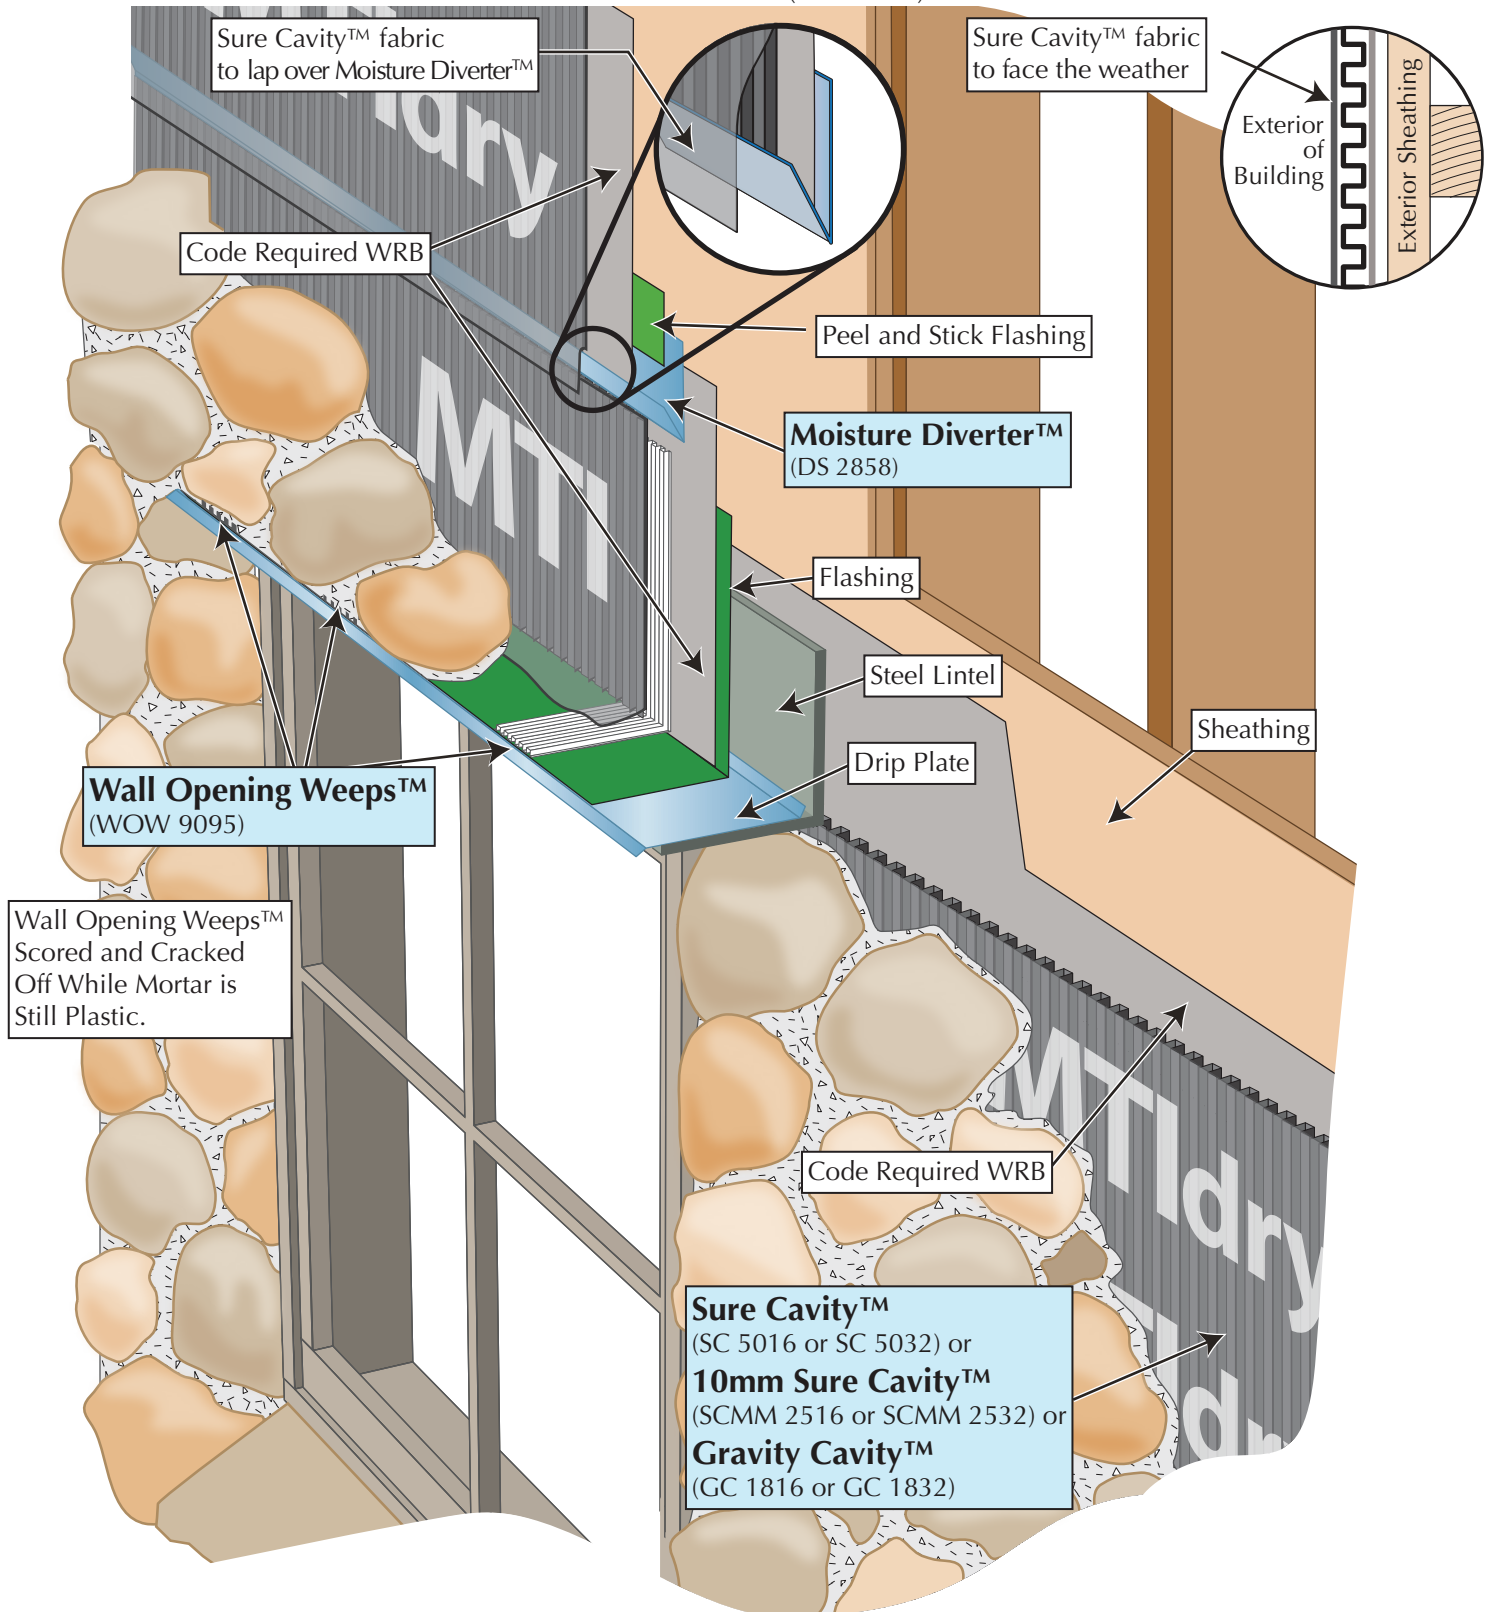

1-800-879-3348 | MTIdry.com




Copyright © Masonry Technology Incorporated, 2018 All Rights Reserved.

MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.

06FR03WD002

Full Stone Veneer Top-Vented Wall Stopped at Soffit

Sure Cavity™ (SC 5016 or SC 5032) or 10mm Sure Cavity™ (SCMM 2516 or SCMM 2532) or Gravity Cavity™ (GC 1816 or GC 1832) and Floor Edging™ (FE 8555)

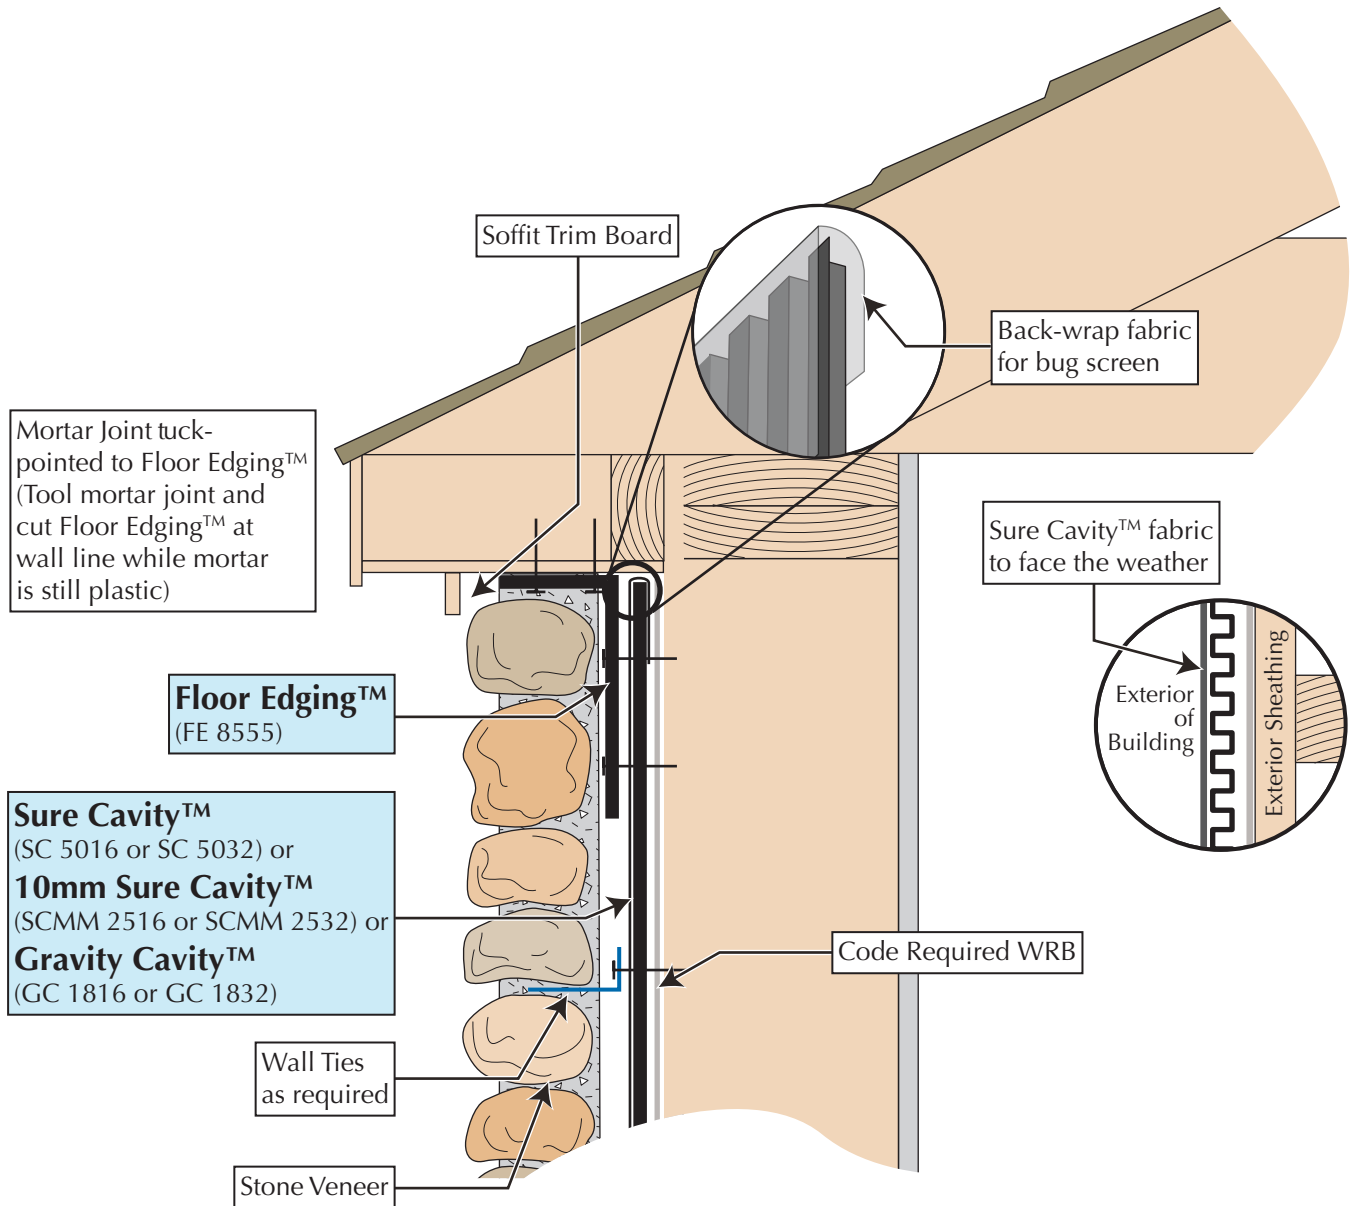

Copyright © Masonry Technology Incorporated, 2009 All Rights Reserved.

MTI details are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These details are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.

06FR05WD001

1-800-879-3348 | MTIdry.com

