

WALL OPENING WEEPS™ SHOULD BE INSTALLED AT ALL LOW POINTS IN THE STONE PATTERN AND SCORED AND CRACKED OFF WHILE MORTAR IS STILL PLASTIC


THE FIRST COURSE OF SURE CAVITY™ MUST BE CUT IN SECTIONS TO FIT UP AND DOWN STONE PATTERN

THE FABRIC SKIRT AT THE BOTTOM OF THE SURE CAVITY™ MUST BE TRIMMED TO FIT AND EXTEND ONTO THE HORIZONTAL PART OF THE FLASHING

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS
3. CONTRACTORS NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT WWW.MTIDRY.COM

THIN STONE VENEER RUN-TO-GRADE WITH WATERPROOFING ON FOUNDATION WALL

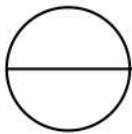

SURE CAVITY™ (SC 5016 OR SC 5032) OR 10MM SURE CAVITY™ (SCMM 2516 OR SCMM 2532) OR GRAVITY CAVITY™ (GC 1816 OR GC 1832) AND WALL OPENING WEEPS (WOW 9095)

MTI CAD drawings are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These drawings are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.