MTI Retrofit Weep™

MRW 3408

The Only COMPLETE Retrofit Weep System

Applications

- The Weeping of Existing Common Brick Veneers
- Flood Damage
- Historical Restoration
- All Brick Veneer Restoration Projects

Why MTI Retrofit Weeps?

The MTI Retrofit Weep™ system is the one and only COMPLETE retrofit weep system. The MTI Retrofit Weep™ allows moisture to exit the brick veneer from the brick cavity to the exterior of the structure. This system is designed to be used with MTI's Retrofit Brick Tie™ system. The MTI Retrofit Weep™ system is an inexpensive alternative solution for a restoration project.

The MTI Retrofit Weeps create a void for moisture to exit

The MTI Advantage

- The One and Only COMPLETE Retrofit Weep System
- Used in Conjuntion with MTI's Retrofit Brick Tie System
- Easy Exterior Installation
- Retrofit Applications

MTI Retrofit Weep™ used in a brick retrofit application

MTI Retrofit Weep™

MRW 3408

The Only COMPLETE Retrofit Weep System

Installation

- Hammer drilll a ³/₈" hole in the bed or head joint of mortar at the lowest point.
- Apply Helix two-part epoxy bonding agent HIT-RE 500 V3 to the MTI Retrofit Weep™.
- Install the MTI Retrofit Weep™ into the ³/₈" hole in the brick bed or head joint using the MTI Retrofit Weep Installation Tool™.
- Use in conjunction with MTI's Retrofit Brick Tie system.

Scan the QR code to view MTI's Retrofit Weep™ Catalog

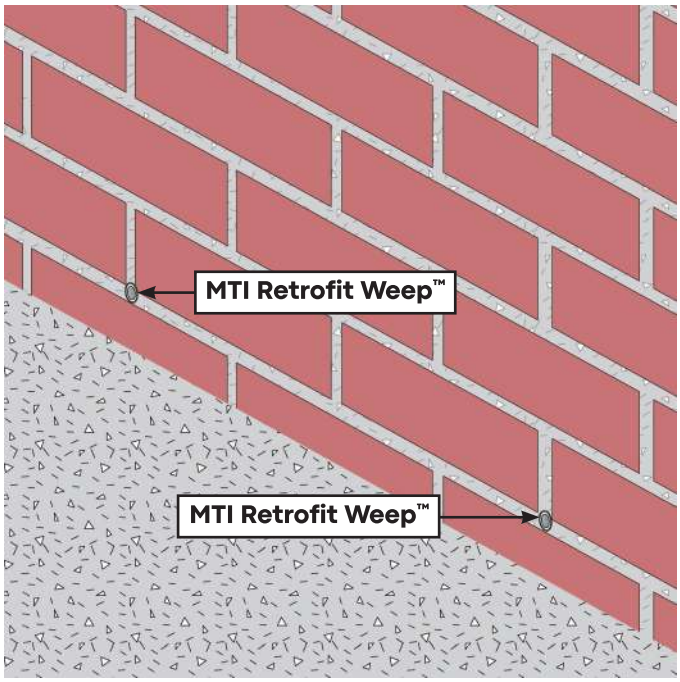

Complete installation guide and installation video can be found at MTIdry.com/installation

Technical Information

Material Description Injection molded, 0.024 inch (0.6 mm) thick acetac.

MTI Retrofit Weep™

(MRW 3408)

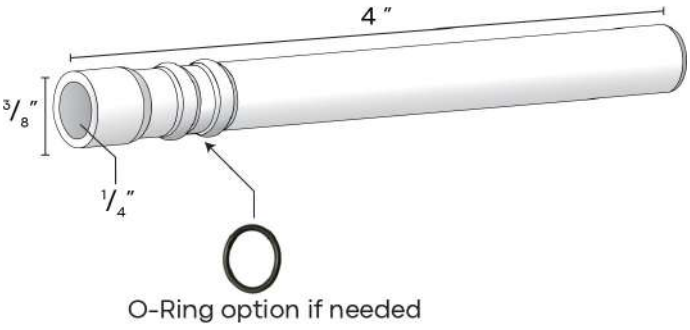

	MRW 3408
Diameter	3/8 in.(10mm)
Box	64 Pieces

Questions about application, installation, or ordering?
MTIdry.com/mti-product/mti-retrofit-weep

MTIdry