




The Only COMPLETE Retrofit Brick Tie System

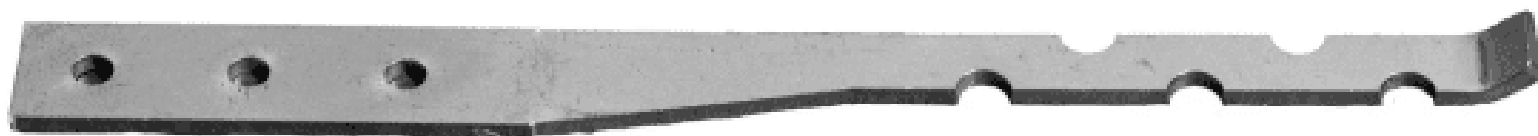

Why Retrofit Brick Ties?

MTI's Retrofit Brick Tie system is the one and only COMPLETE retrofit brick tie system on the market. MTI's Retrofit Brick Tie™ allows the brick veneer to be anchored to the stud framing from the interior. This system is designed to be used with MTI's retrofit weep system. The MTI retrofit brick tie system is an inexpensive alternative solution for a brick restoration project.

Applications

- ✓ The Reattachment of Common Brick Veneers to Existing Stud backup walls
- ✓ Residential Applications
- ✓ Commercial Applications
- ✓ Flood Damage
- ✓ Interior Fire Damage
- ✓ Historical Restoration
- ✓ All Brick Veneer Restoration Projects When the Removal and Replacement of the Brick Veneer is Not Feasible

The MTI Advantage

- ✓ Over 2,500 LB/FT² Test to Break!
- ✓ Used in Conjunction with MTI's Retrofit Weep System
- ✓ Easy Interior Installation
- ✓ Retrofit Applications



Retrofit Brick Tie™ used in a retrofit application

Retrofit Brick Tie™

RBT 7381




The Only COMPLETE Retrofit Brick Tie System

Installation

- From the interior, drill a 3" deep 3/8" diameter hole in the mortar joint next to the studs. Clean dust and debris from the hole.
- Fill the mortar joint with anchoring epoxy.
- Insert the Retrofit Brick Tie™ in epoxy and fasten to the stud.
- Install the Retrofit Brick Ties every 16" vertically on studs.
- Use in conjunction with MTI's Retrofit Weep system.

Scan the QR code to view MTI's Retrofit Brick Tie™ Catalog

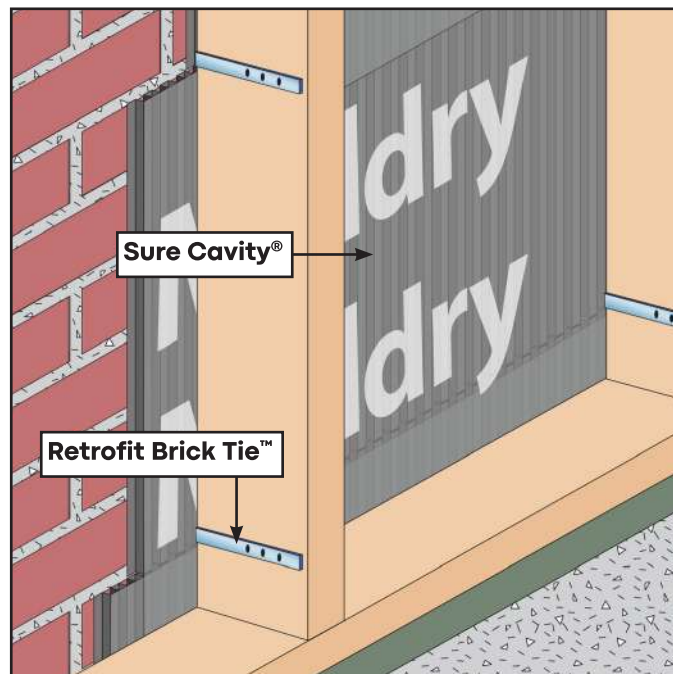

Complete installation guide and installation video can be found at MTIdry.com/installation

Technical Information


Material 12 Gauge(.104"), 304 Stainless Steel.

Description

Contact MTI for Complete Testing Summary

Retrofit Brick Tie™

(RBT 7381)

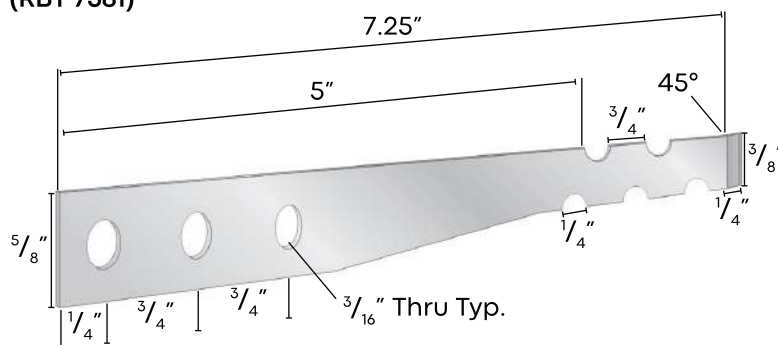

Pieces Per Box

100

Questions about application, installation, or ordering?

MTIdry.com/mti-product/retrofit-brick-tie

