



Self Spaced Weeps For Natural Stone



Applications

- ✓ Natural Stone
- ✓ Single Wythe Masonry

Keep Walls Dry With MTI

Common weep tubes and ropes in cavity walls are ineffective at weeping, and poor installation often makes drainage impossible. MTI's self-spaced weeps that roll out on the flashing ensure ample weeping capacity and foolproof installation.



Rolls of self-spaced weeps make installation fast & simple

The MTI Advantage

- ✓ Forms Bottom of Bed Joint Mortar
- ✓ Weeps Directly on Flashing
- ✓ Five Weep Holes Every 9.5"
- ✓ Time Saving Rolls
- ✓ Foolproof Installation
- ✓ Translucent to Blend With Mortar



Stone Cavity Weep™ with Sure Cavity® on natural stone



Stone Cavity Weep™


SCV 5012



Self Spaced Weeps For Natural Stone

Installation

- For Natural Stone Walls: Place Stone Cavity Weep™ on flashing with continuous belt centered in cavity and legs extending out from the face of the wall 1" to 1 1/2".
- For Single Wythe Walls: Place Stone Cavity Weep™ on flashing with continuous belt centered in the core and legs extending to the exterior.
- Place bed joint of mortar on Stone Cavity Weep™ and lay masonry units.
- Tool joints and lightly score legs of weeps at face and crack off by pushing downward while mortar is still plastic.
- Finish tool joint and brush.

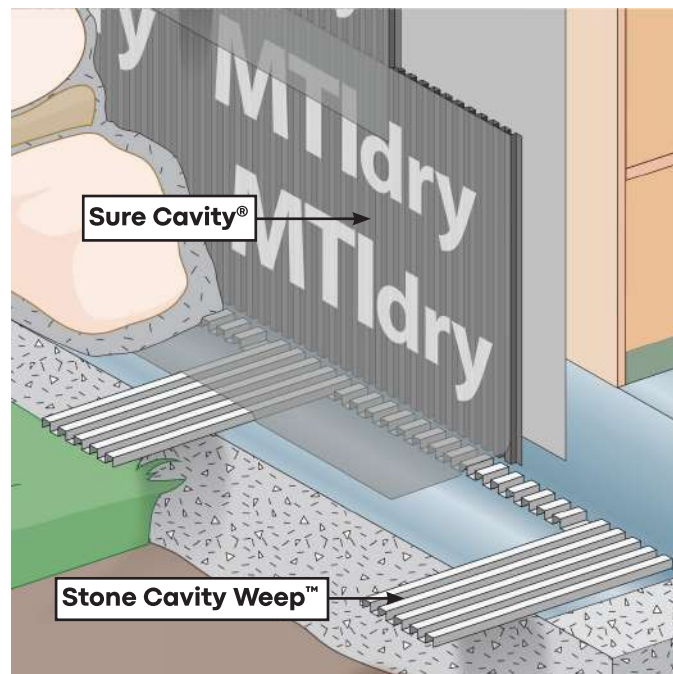

Complete installation guide and installation video can be found at MTIdry.com/installation


Technical Information

Material Description High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations.

UV Exposure Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Stone Cavity Weep™ (SCV 5012)

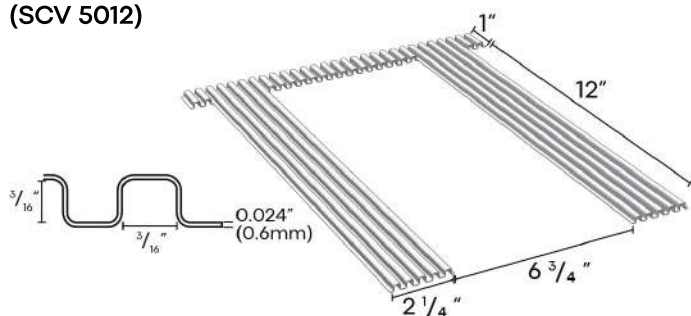

SCV 5012

Depth (drainage gap) 3/16 in. (5mm)

Roll 25 ft

Bundle 50 ft/2 rolls

Box 300 ft/6 bundles

Cannot be purchased in single rolls

Questions about application, installation, or ordering?
MTIdry.com/mti-product/stone-cavity-weep

