



For Renovations & Large Masonry Units

## Applications

- ✓ Retrofits & Renovations
- ✓ Natural Stone
- ✓ Full Brick

## Weeps For Retrofits & Oversized Stone

Unique applications require special weeps. Tuckpoint Retrofit Weeps™ are the solution for drainage with oversized masonry units as well as renovations where mortar is removed to add weeps.



## The MTI Advantage

- ✓ Forms Bottom of Bed Joint Mortar
- ✓ Weeps Directly on Flashing
- ✓ Weeps Standard or Oversized Masonry Units
- ✓ Foolproof Installation
- ✓ Translucent to Blend With Mortar

14" long Tuckpoint Retrofit Weeps™ are available in 50' rolls or 2 1/2" wide pre-cut weeps






## For Renovations & Large Masonry Units

### Installation

- Remove existing mortar at lowest point in cavity to fit weep.
- Space weeps no more than 10" on center.
- Insert Tuckpoint Retrofit Weeps™ and tuck point mortar on top side of weep only.
- Tool joints and lightly score legs of Tuckpoint Retrofit Weeps™ at face and crack off by pushing downward while mortar is still plastic.
- Finish tool joint and brush.

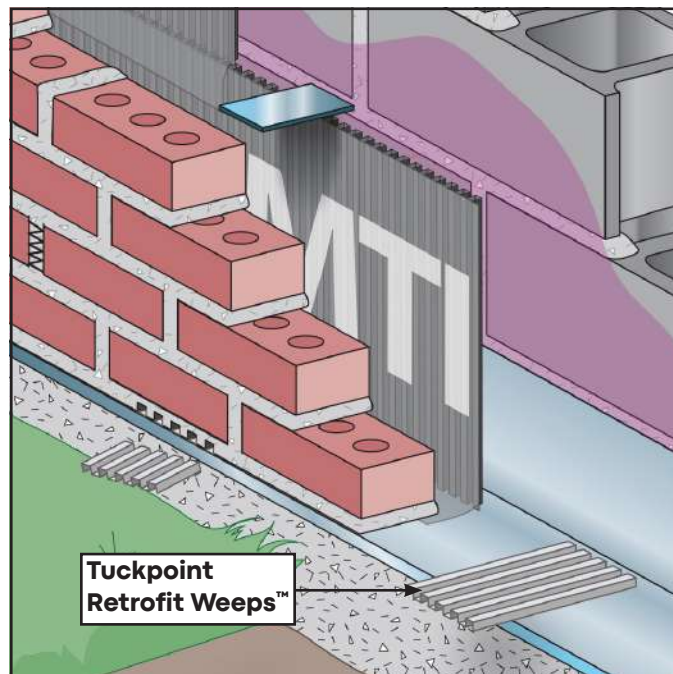

Complete installation guide and installation video can be found at [MTIdry.com/installation](http://MTIdry.com/installation)

### Technical Information


**Material Description** High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations.

**UV Exposure** Over 9 weeks in accelerated UV testing (ASTM G 154)

**Fungi Resistance** Does not support fungal growth (ASTM C 1338)

### Tuckpoint Retrofit Weeps™

(TRW 1425)

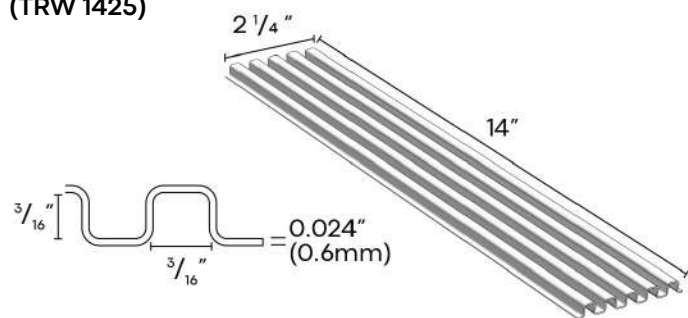

TRW 1425

**Depth (drainage gap)** 3/16 in. (5mm)

**Box** 100 pieces

**Roll length (TRW 1425R)** 50 ft

\*Tuckpoint Retrofit Weeps™ (TRW 1425R) can be ordered in a 50' roll and field fabricated to custom widths.