



Weeps For Block Basement Walls



Applications

- ☑ Interior Below Grade

Drain Block Basement Walls to Stay Dry

Block basement walls are an economical choice but increase the risk of moisture penetration and damp basements. Vent Mat drains block cores into the drain field. Keep your basement dry with MTI's complete below grade moisture management systems.



Rolls of self-spaced weeps make installation fast & simple

The MTI Advantage

- ☑ Forms Bottom of Bed Joint of Mortar
- ☑ Creates Sixteen Weep Holes in Every Block
- ☑ Weeps at the Lowest Point of the Wall
- ☑ Weeps in Every Core
- ☑ Easy to Install Self-Spaced Weeps
- ☑ 100% Recycled Content




Vent Mat™ creates multiple weep tunnels in each block core



Weeps For Block Basement Walls

Installation

- ➊ Place Vent Mat™ on footings with continuous belt centered in block core and legs extending to the interior drain field.
- ➋ Place bed joint of mortar on Vent Mat™ and lay masonry units.

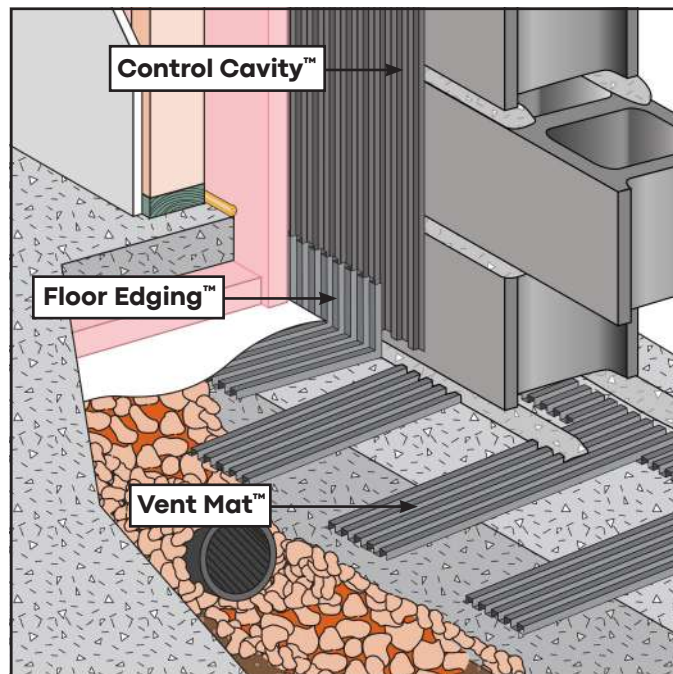

Technical Information


Complete installation guide and installation video can be found at MTIdry.com/installation

Material Description High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations.

UV Exposure Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Vent Mat™ (VM 9025)

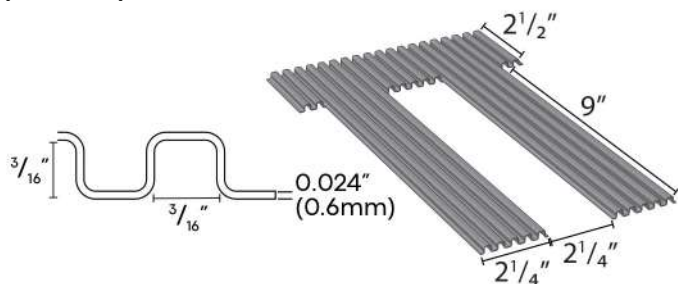

VM 9025

Depth (drainage gap)	3/16 in. (5mm)
Roll	25 ft
Bundle	50 ft / 2 rolls
Box	300 ft / 6 bundles
Pallet	2,400 ft

Cannot be purchased in single rolls

Questions about application, installation, or ordering?

MTIdry.com/mti-product/vent-mat

