

Wall Opening Weeps™

WOW 9095




Versatile Weeps For Masonry Veneers & More

Applications

- ✓ Stucco, Thin Stone or Brick
- ✓ Natural Stone
- ✓ Full Brick

Keep Walls Dry With MTI

Windows. Doors. Run-to-grade veneers. Moisture needs a way out of the wall at each interruption in the drainage plane. Wall Opening Weeps create a pathway for moisture to drain directly on the flashing.

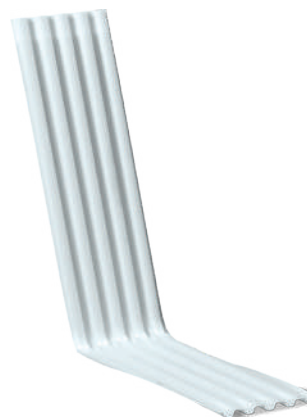

L-shaped weeps create weep tunnels directly on the flashing

The MTI Advantage

- ✓ Maintain Vertical Channels Into Veneer Cavities
- ✓ Weeps Directly on Flashing
- ✓ Work in a Variety of Exteriors
- ✓ Foolproof Installation
- ✓ Translucent to Blend With Mortar



Wall Opening Weeps with Sure Cavity® on natural stone



Detail Drawings • BIM • Free Consultation • Videos
info@mtidry.com 800-879-3348 MTIdry.com

Wall Opening Weeps™


WOW 9095



Versatile Weeps For Masonry Veneers & More

Installation

- Install Wall Opening Weeps™ on flashings 10" on center.
- Install Sure Cavity® rainscreen with fabric skirt lapping over Wall Opening Weeps.
- Apply scratch coat or mortar and exterior veneer units.
- Tool joints and lightly score legs of weeps at face of wall and crack off by pushing downward while mortar is still plastic.
- Finish tool joint and brush.

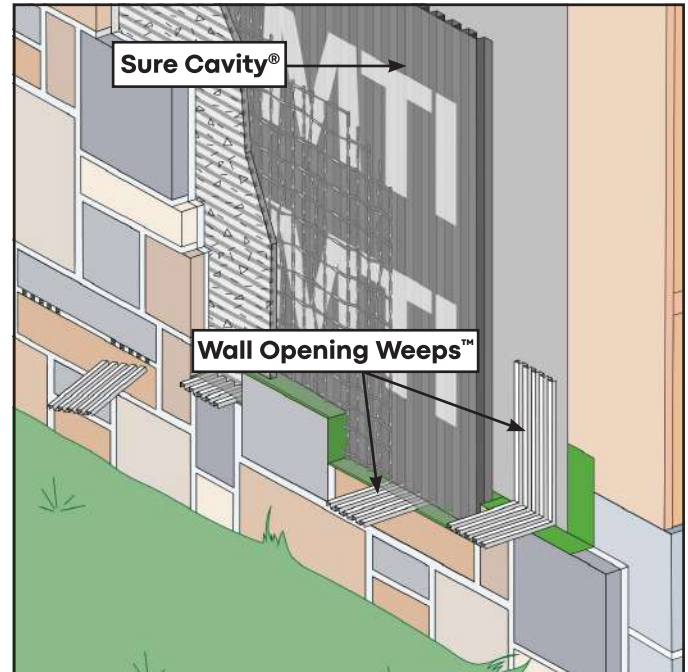

Complete installation guide and installation video can be found at MTIdry.com/installation


Technical Information

Material Description High impact polystyrene sheets, 0.024 inch (0.6 mm) thick, formed with corrugations.

UV Exposure Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Wall Opening Weeps™ (WOW 9095)

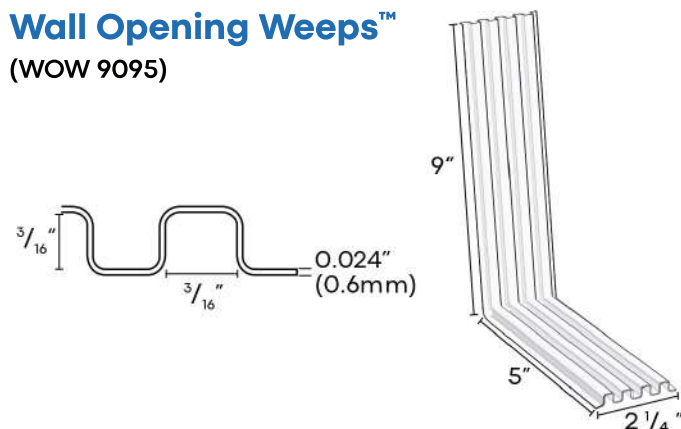

WOW 9095

Depth (drainage gap) 3/16 in. (5mm)

Box 100 pieces

Questions about application, installation, or ordering?
MTIdry.com/mti-product/wall-opening-weeps

