

LAP FABRIC OVER
MOISTURE DIVERTER™

FIRE-RATED SURE CAVITY®
(FRSC 5016 OR FRSC 5032)

WALL OPENING WEEPS™
SCORED AND CRACKED OFF
WHILE MORTAR IS STILL PLASTIC

WALL OPENING WEEPS™
(WOW 9095)

BACK WRAP FABRIC
FOR BUG SCREEN

FABRIC TO FACE
THE WEATHER

EXTERIOR
OF BUILDING

CODE REQUIRED WRB

EXTERIOR SHEATHING

FLASHING TAPE

MOISTURE DIVERTER™
(DS 2858)

CODE REQUIRED WRB

DRIP PLATE WITH END DAM

BACKER ROD AND CAULK

METAL TERMINATION

FIRE-RATED SURE CAVITY®
(FRSC 5016 OR FRSC 5032)

SELF FURRING
EXPANDED METAL LATH

5/8" TO 3/4" SCRATCH
COAT


ADHERING MORTAR

THIN STONE VENEER

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS
3. CONTRACTORS NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT WWW.MTIDRY.COM

THIN STONE VENEER AT WINDOW HEAD WITH FIRE-RATED SURE CAVITY®

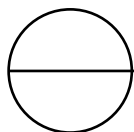

FIRE-RATED SURE CAVITY® (FRSC 5016 OR FRSC 5032) AND MOISTURE DIVERTER™ (DS 2858) AND
WALL OPENING WEEPS™ (WOW 9095)

MTI CAD drawings are created from sources deemed to be reliable. However, MTI does not guarantee the accuracy or completeness of any information, nor shall be held responsible for any errors, omissions, or damages arising out of the use of this information. These drawings are created with the understanding that MTI is providing information but is not attempting to render engineering or other professional service. If such services are required, the assistance of an appropriate profession should be sought. Use MTI materials in strict conformance with local building codes and regulations. Consult local code/code officials prior to installation. It is the buyer's responsibility to ensure that MTI materials are used in strict conformance with local building codes and regulations.