

10mm Sure Cavity®

SCMM 2516
SCMM 2532



Rainscreen Drainage Plane

Applications

- ✓ Stucco, Thin Stone or Thin Brick
- ✓ Natural Stone
- ✓ Full Brick
- ✓ Wood or Composite Siding

Why Rainscreen? No Wall Is Waterproof

Today's "tighter" buildings increase the risk for moisture and mold problems. Rainscreen systems greatly reduce this risk by enabling moisture to swiftly exit the building envelope. Rainscreens are inexpensive insurance to mitigate the risk of wall failure. Smart builders keep walls dry with 10mm Sure Cavity®.



10mm Sure Cavity® behind full stone application

The MTI Advantage

- ✓ Unobstructed Drainage
- ✓ Vapor Permeable for Full Ventilation
- ✓ Resists Compression, Reduces Waviness
- ✓ Cut Install Time by 50% (vs. furring strips)
- ✓ Mortar Blocking Fabric & Bug Screen
- ✓ Plastic is 100% Recycled Content
- ✓ 20 Year Warranty



Rigid channels don't compress, creating predictable drainage



Detail Drawings • BIM • Free Consultation • Videos
info@mtidry.com 800-879-3348 MTIdry.com

10mm Sure Cavity®


SCMM 2516
SCMM 2532



Rainscreen Drainage Plane

Installation

- Install 10mm Sure Cavity® rainscreen outboard of water resistive barrier. Mortar-blocking fabric faces installer.
- Back-wrap 4" fabric skirt to create bug screen on the lowest course. 4" fabric skirt will lap shingle fashion in subsequent courses.
- Corrugated plastic to be butted at seams. Do not overlap plastic. Not necessary to align channels. Wrap rainscreen around corners and extend to nearest structural member.
- Fasten every 24" on-center with a hammer stapler over nailable surfaces. On masonry backup walls use dime-size dabs of adhesive to hold in place. Installing lath or veneer will ultimately sandwich rainscreen in place.

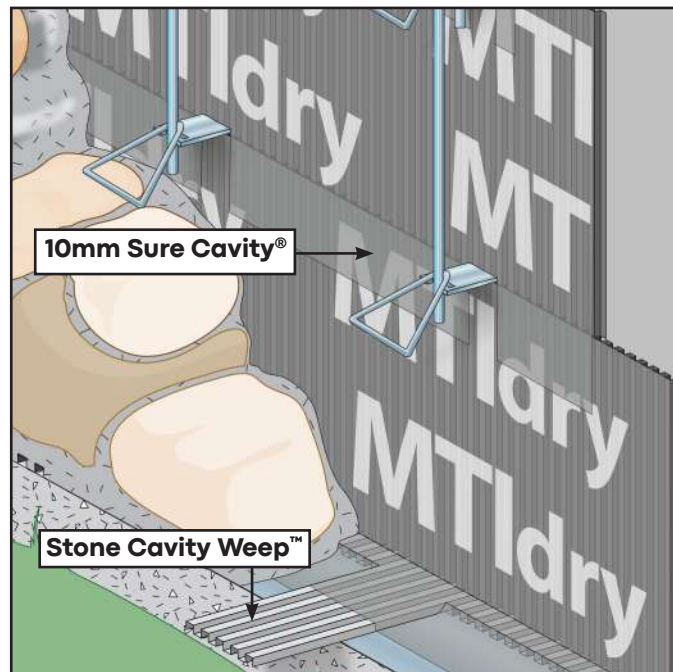

Complete installation guide and installation video can be found at MTIdry.com/installation

Technical Information


Material Description Perforated and corrugated plastic made of 0.6 mm pre-consumer recycled high impact polystyrene with an adhered spun-bond polypropylene fabric.

UV Exposure Over 9 weeks in accelerated UV testing (ASTM G 154)

Fungi Resistance Does not support fungal growth (ASTM C 1338)

Complete testing reports can be found at MTIdry.com/mti-product-testing

10mm Sure Cavity®
(SCMM 2516, SCMM 2532)

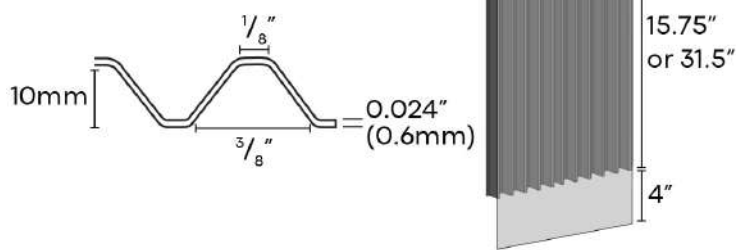

SCMM 2516 | SCMM 2532

Depth (drainage gap)	3/8 in. (10mm)	
Roll Length	25 ft	
Roll Width	15.75 in	31.5 in
Roll Coverage	33 ft ²	66 ft ²
Pallet	2,112 ft ²	2,112 ft ²

Questions about application, installation, or ordering?
MTIdry.com/mti-product/10mm-sure-cavity

